


Installation instructions


Possibility 1 – Directly into the fresh screed

After applying the screed, press the easylogger softly with your fingers into the still soft/liquid screed until the easylogger is just below the upper edge of the screed (see image).

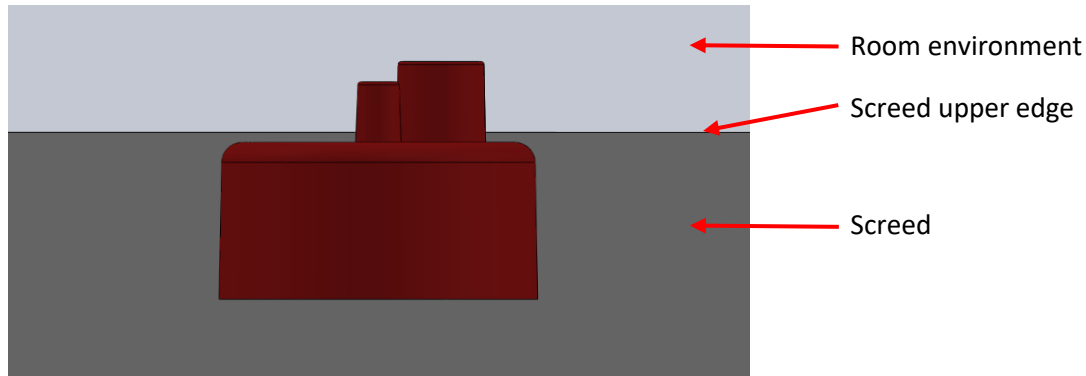

Possibility 2 – Subsequent contribution

Drill, with a 35mm drill, about 18mm deep into the screed and glue the easylogger into the drilled hole with a filler or a floor adhesive (see picture).

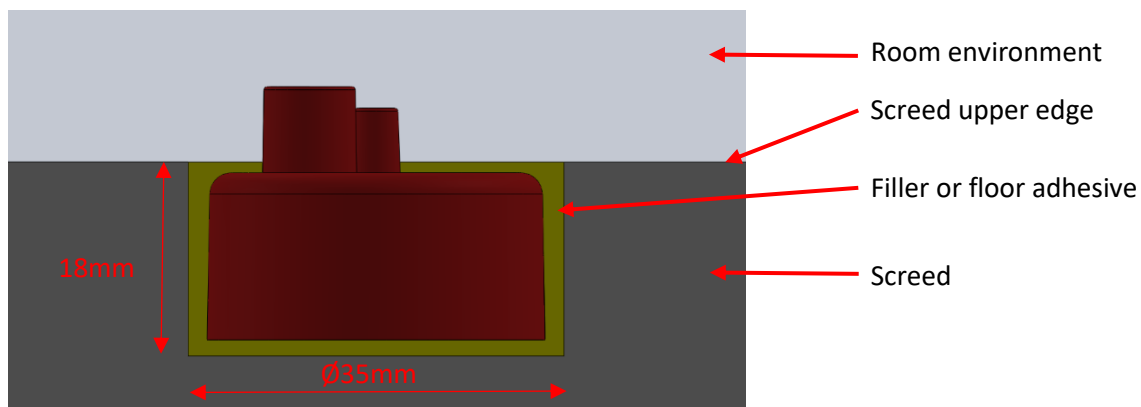

With both variants it is very important that no screed/filler or adhesive enters the openings on the top of the easylogger, otherwise the measurement result will be falsified.

To find the device more easily, stick the enclosed flag into the smaller hole on the top after installing the easylogger.

Document the exact position of the device so that it can be easily read out after the floor (parquet,..) has been laid.

Further procedure after screed hardening

After the screed has hardened and completely dried (ready for laying), the flag is removed again and the protruding housing of the two holes is cut off with a sharp knife.

The device remains in the ground.