



easylogger App

Version 3.8.1

for iOS and Android

Requirements of the easylogger app for Android:

Bluetooth 4 or later and an Android version 4.2 or later!

Requirements of the easylogger App for Apple iOS:

Bluetooth 4 or later and an iOS version of 9.0 or later!



Inhaltsverzeichnis

- 1. General information on reading out an easylogger..... S. 3
- 2. Login screen..... S. 4
- 3. Creation of a Floorprotector user account..... S. 5 - 8
- 4. Read out an easylogger..... S. 9
- 5. Main screen.....S. 10 - 11
- 6. App settingsS. 12
- 7. Help section S. 13
- 8. Reset password..... S. 14 - 15
- 9. General Information





1. General information about synchronization

What is a readout?


A readout is the retrieval of the measurement data recorded by the easylogger using the mobile app or the desktop application.

When can I read out?

To enable a successful readout, Bluetooth must be activated on your smartphone / tablet. Furthermore, the easylogger must be "woken up" with a magnet (minimum holding power 1kg) and must be within range. To ensure a lifetime of up to 6 years, an easylogger "sleeps" until it is woken up.



2. Login screen

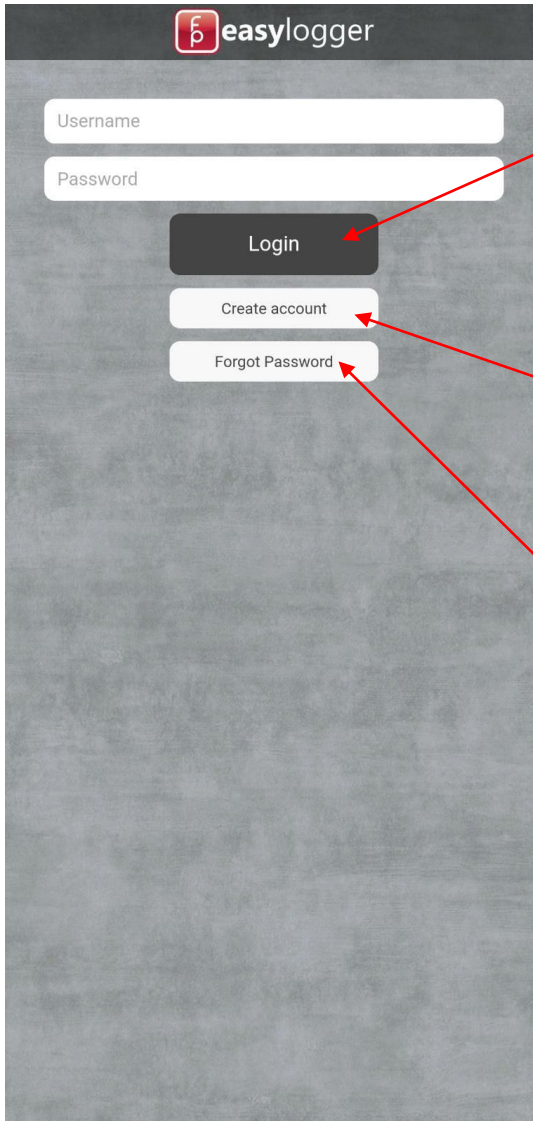


Before logging in, you must first enter your user name and password.

If you do not have an account yet, you can create one by clicking the "Create Account" button. (See page 5).

If you have forgotten your password, click on the "Forgot password" button to reset your password. (See page 14).

3. Creation of a Floorprotector user account

After you have clicked on "Create account", you will be redirected to this screen.

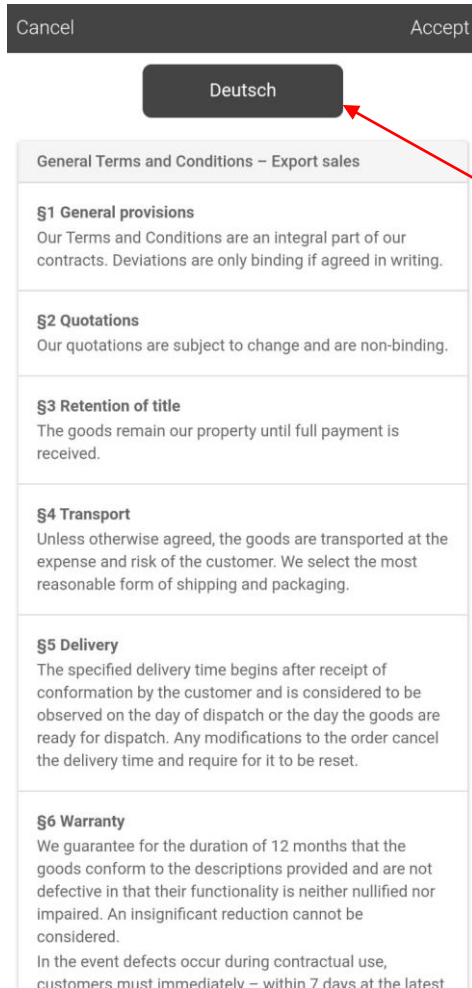

Cancel Accept

Deutsch

General Terms and Conditions – Export sales

§1 General provisions
Our Terms and Conditions are an integral part of our contracts. Deviations are only binding if agreed in writing.

§2 Quotations
Our quotations are subject to change and are non-binding.

§3 Retention of title
The goods remain our property until full payment is received.

§4 Transport
Unless otherwise agreed, the goods are transported at the expense and risk of the customer. We select the most reasonable form of shipping and packaging.

§5 Delivery
The specified delivery time begins after receipt of confirmation by the customer and is considered to be observed on the day of dispatch or the day the goods are ready for dispatch. Any modifications to the order cancel the delivery time and require for it to be reset.

§6 Warranty
We guarantee for the duration of 12 months that the goods conform to the descriptions provided and are not defective in that their functionality is neither nullified nor impaired. An insignificant reduction cannot be considered.
In the event defects occur during contractual use, customers must immediately – within 7 days at the latest


By clicking on the "Accept" button you accept our general terms and conditions and will be forwarded.

This button changes the language of the GTC's.

Here you can see our general terms and conditions of sale.

3. Creation of a Floorprotector user account (Continuation)

In this screen you must enter your account details.

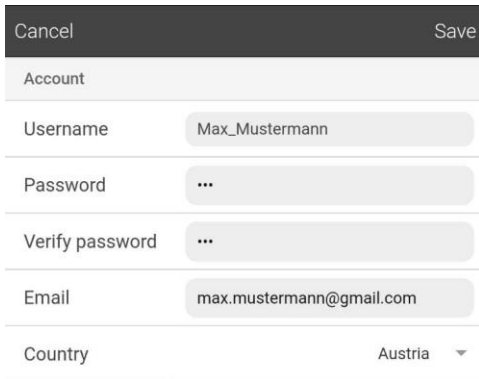


A screenshot of a mobile application form for creating a user account. The form has a dark header with 'Cancel' on the left and 'Save' on the right. Below the header is a section titled 'Account' with several input fields: 'Username' with the value 'Max_Mustermann', 'Password' with three dots, 'Verify password' with three dots, 'Email' with the value 'max.mustermann@gmail.com', and 'Country' with a dropdown menu showing 'Austria'.

After entering your data, click on "Save" to proceed to the next step.

3. Creation of a Floorprotector user account (Continuation)

Now you see the privacy policy.

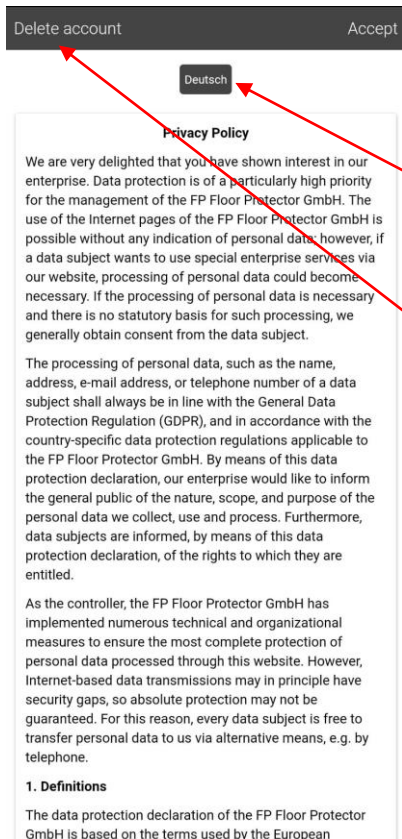

You hereby accept our privacy policy and complete the creation of your account.

The privacy policy is also available in German and English.


If you do not agree with the privacy policy, click on "Delete Account" to cancel the creation of your account.



After you have accepted our privacy policy, you will be sent an e-mail. In this e-mail you will find a link to confirm your e-mail address.

3. Creation of a Floorprotector user account (Continuation)

After creating your account you will be forwarded to the main screen and can now read out your first easylogger.

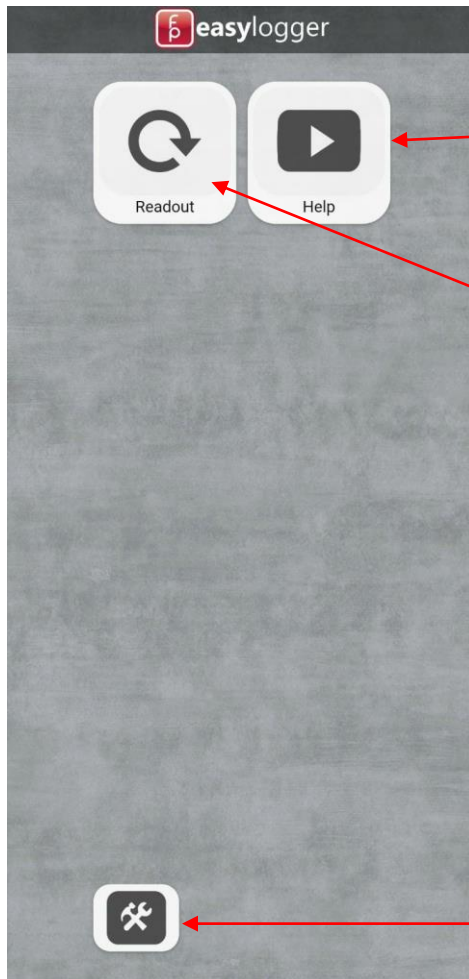


Help section
P. 13

By clicking on this symbol a
easylogger can be read out.
See next chapter.

App settings
P. 12

4. Read out an easylogger

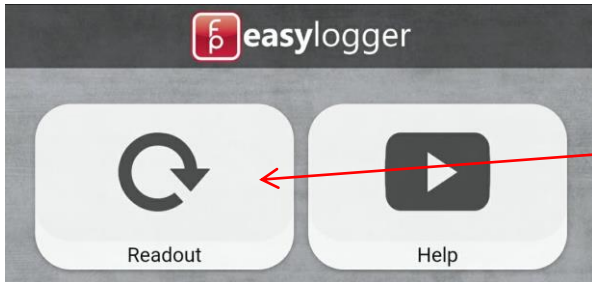


By clicking on "Readout" you can retrieve the measured data of an easylogger.




This message will then appear, explaining how to wake up the easylogger.

By clicking on "OK" you start the readout finally.

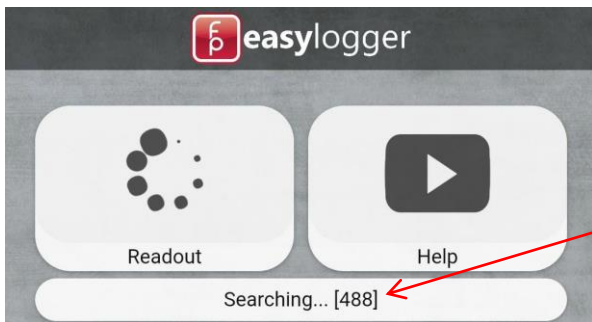


Now the search for an easylogger has started, here you can see how long the search for an easylogger takes.

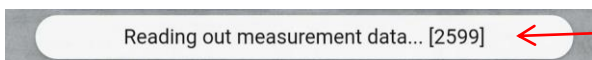

If the easylogger has been found, the measured data will be read out, if this is completed, you can see the measured data on the main screen.



5. Main screen

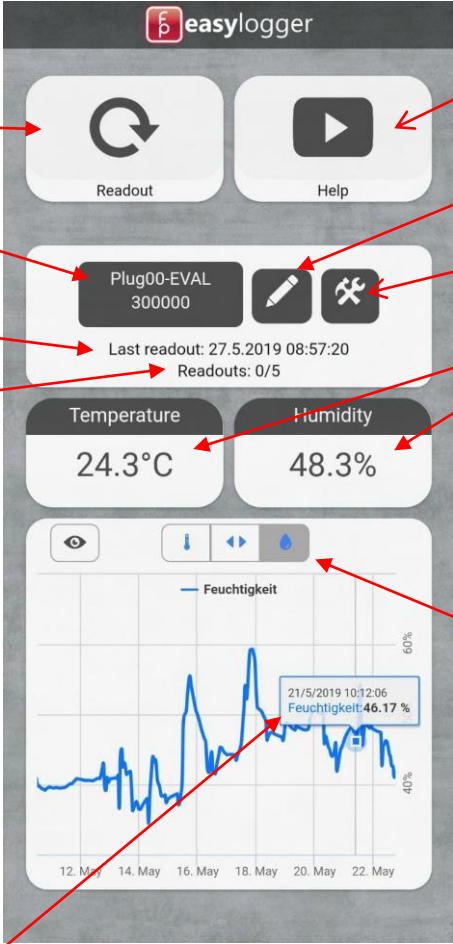

Read out an easylogger
p. 9

Current easylogger

Time of the last Synchronization

Number of remaining Readings

Temperature
24.3°C

Humidity
48.3%

Help section
p. 13

Edit easylogger

App settings
p. 12

Temperature and humidity of the last readout.

You can switch between displaying temperature or humidity by clicking on one of the two icons: [Temperature icon] and [Humidity icon].


If you touch the line at a specific point, detailed information about the measurement data at that point is displayed.

The screenshot shows the following interface elements:

- Header: easylogger logo
- Buttons: Readout (circular arrow icon), Help (play button icon)
- Device Info: Plug00-EVAL 300000
- Status: Last readout: 27.5.2019 08:57:20, Readouts: 0/5
- Temperature: 24.3°C
- Humidity: 48.3%
- Graph: Feuchtigkeit (Humidity) line graph from 12. May to 22. May. A tooltip shows: 21/5/2019 10:12:06 Feuchtigkeit 46.17 %
- Navigation: Eye icon, back/forward arrows, and a water drop icon.

5. Main screen (Continuation)

If you click on the current easylogger, a list of all the easyloggers you have already read out will appear.

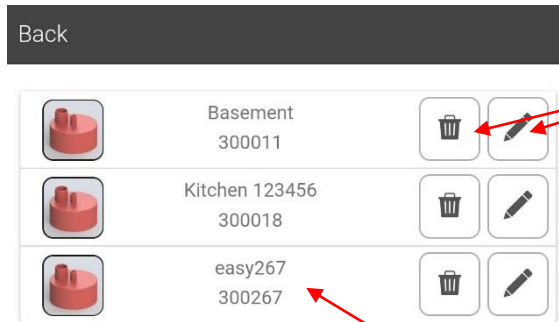


With these buttons you can edit the easylogger or delete it from your list.

By clicking on an easylogger, it will be selected.

14. App settings

After you have clicked on the "Settings" button, you will be directed to the settings of the app.

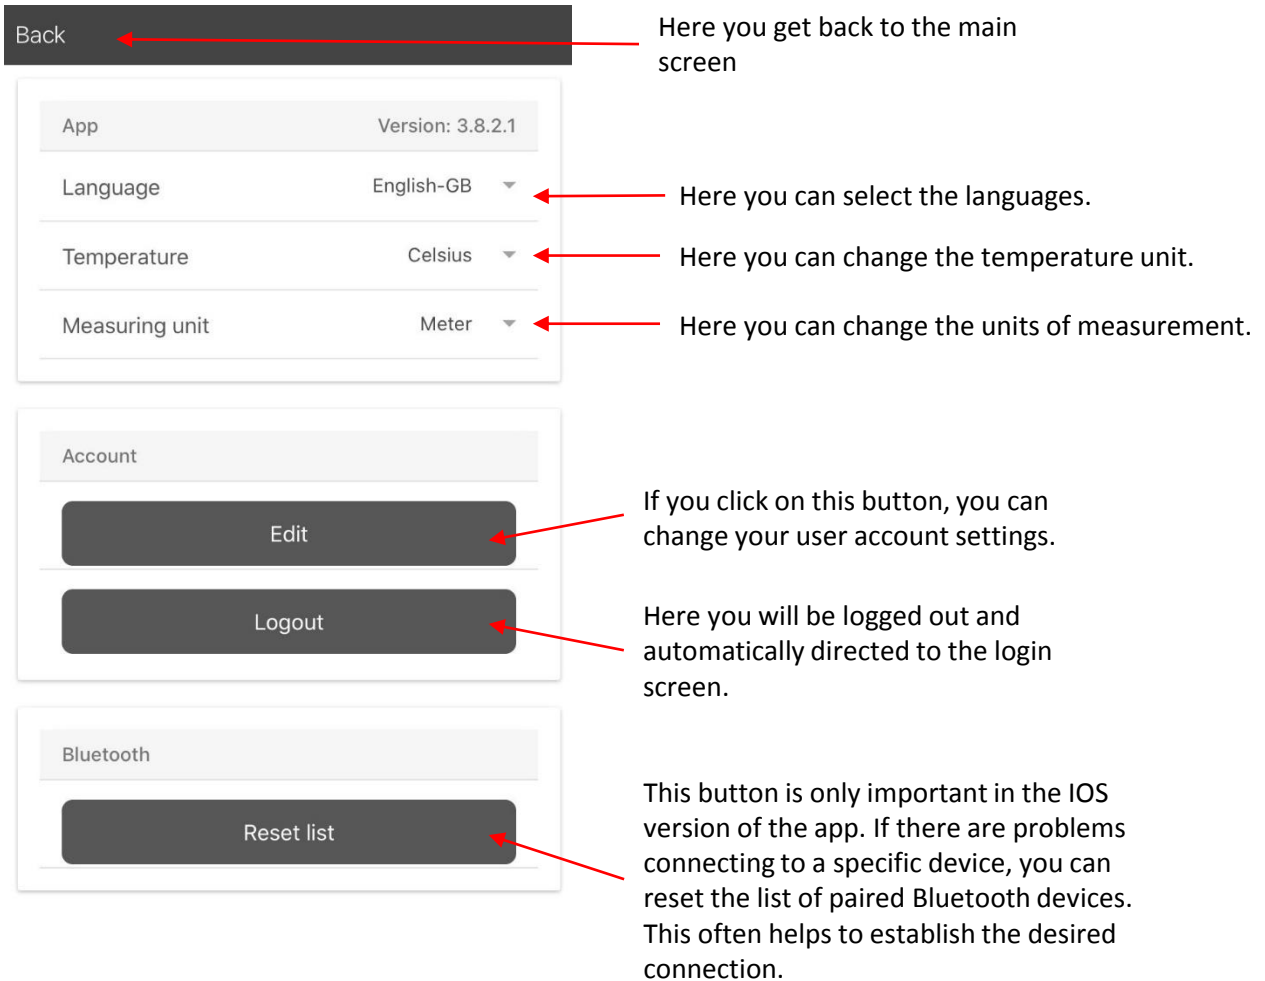


The screenshot shows the app settings interface. At the top is a dark grey bar with a "Back" button. Below this are three main sections: "App", "Account", and "Bluetooth".

- App section:** Contains a header "App" with "Version: 3.8.2.1" on the right. Below are three rows, each with a label on the left and a dropdown menu on the right:
 - Language: English-GB
 - Temperature: Celsius
 - Measuring unit: Meter
- Account section:** Contains two buttons: "Edit" and "Logout".
- Bluetooth section:** Contains one button: "Reset list".

Annotations with red arrows point to the following elements:

- "Back" button: Here you get back to the main screen.
- Language dropdown: Here you can select the languages.
- Temperature dropdown: Here you can change the temperature unit.
- Measuring unit dropdown: Here you can change the units of measurement.
- Edit button: If you click on this button, you can change your user account settings.
- Logout button: Here you will be logged out and automatically directed to the login screen.
- Reset list button: This button is only important in the IOS version of the app. If there are problems connecting to a specific device, you can reset the list of paired Bluetooth devices. This often helps to establish the desired connection.


12. Help section

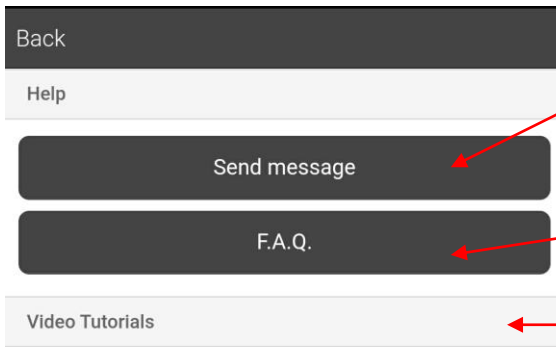

Opens the **message system** (see below), which allows you to leave a message for our customer support.

Shows answers to the most frequently asked questions by our users.

Here you will find various instructional videos

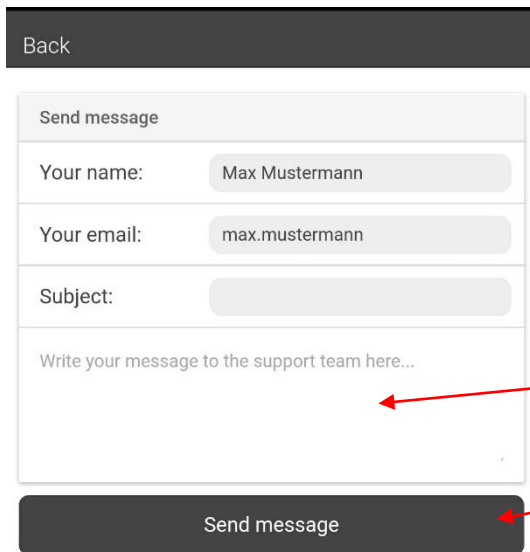

Enter your name, email address and the subject of your message

Write your message

Press the "Send message" button

Our support team will contact you in the following days.

16. Reset password

After you have clicked on "Forgot password", this window appears.

Back

If you wish to retrieve your password, we can send you a password recovery email to the address you provided during the registration process.

Email

Send email

Enter the e-mail address of your account here and click "Send email".

Email sent


A password recovery email has been sent to your mail-account.

OK


If you have entered the correct e-mail address, this message appears.

16. Reset password (Continuation)

After you have successfully entered your e-mail address, an e-mail will be sent to you.

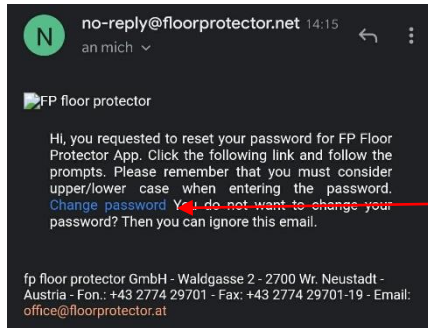

Click on the link in the email to reset your password.

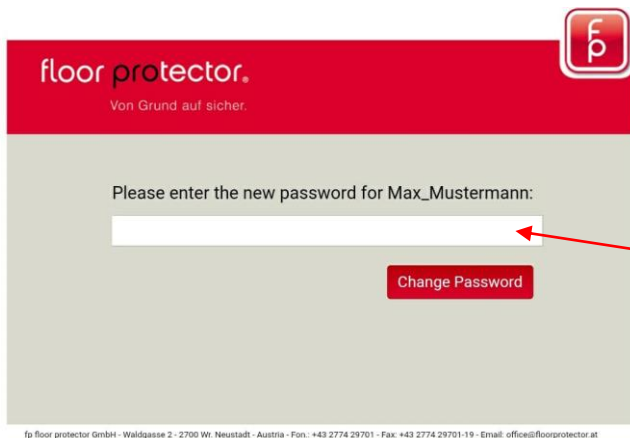

After you have clicked on the link, you will be directed to this website

Enter your new password here and click on "Change password".



After successfully changing your password, you can log back into our app with your new password.

Certificates

1. FCC

FCC ID: 2ADQTV1EL

a) User Information gem. FCC 15.21:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

b) Part 15 Statement gem. FCC 15.19:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation.

2. IC

IC ID : 12568A-V1EL

c) Statement gem. RSS GEN Issue 5::

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference

(2) This device must accept any interference, including interference that may cause undesired operation of the device..

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:(1) Cet appareil ne doit pas causer d'interférences(2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

RF exposure separation distance of easylogger:

20.0cm

Distance de séparation d'exposition RF de l'easylogger:

20.0cm



fp floor protector GmbH
A-2700 Wr. Neustadt



Waldgasse 2
A-2700 Wiener Neustadt
fon: +43-(0)2774 – 29 701
fax: +43-(0)2774 – 29 701 -19
office@floorprotector.at
www.floorprotector.at

